

INSTRUCTIONS:

1. Remove old aerator from faucet. Use wrench if necessary.
2. Remove any old washers that might be caught inside the spout.
3. Clean the threads outside the faucet spout.
4. Install the new aerator onto the spout by hand.
5. Turn on faucet. If leak occurs, tighten more firmly.

INSTRUCCIONES:

1. Quite el viejo aireador del grifo. Utilice una llave inglesa de ser necesario.
2. Quite todas las arandelas viejas que pudieran haber quedado atrapadas dentro del surtidor de agua.
3. Limpie las roscas fuera del surtidor de agua del grifo.
4. Instale el nuevo aireador en el surtidor de agua en forma manual.
5. Abra el grifo. Si ocurre un escape, ajuste más firmemente.

How SSR Works:

Problem: Water stream direction

Solution: Adjustable stream faucet aerator

Some combinations of sink and faucet are visually pleasing, but not ideal for hand washing. With NEOPERL's SSR faucet aerators, you can easily adjust the stream direction and eliminate splashing from the curvature of the sink.

